


■ FC 51 Remote Mounting Kit Mounting Instruction



Step 1

Fit gasket on LCP

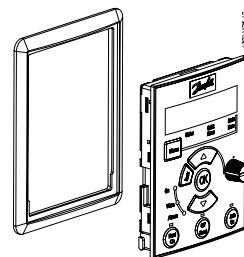

Step 2


Place LCP on panel - see dimensions of hole on drawing

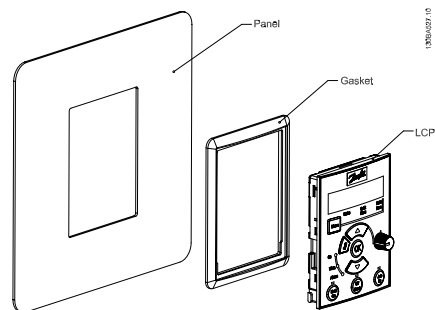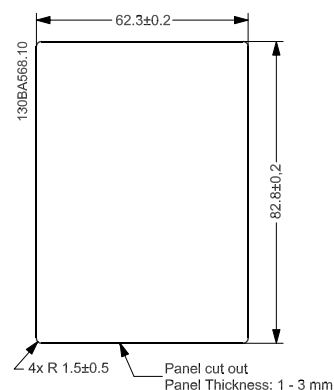

Step 3

Place bracket on back of the LCP, then slide down. Tighten screws and connect cable to LCP.


NOTE! Use the provided thread cutting screws to fasten connector to LCP. Tightening torque: 1.3 Nm

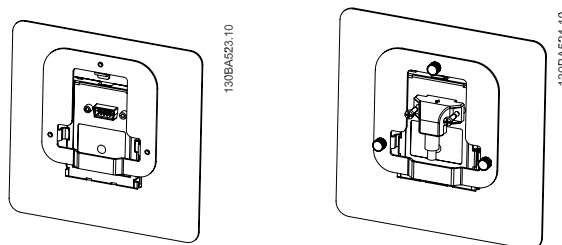

Step 4

Connect cable to drive

NOTE! Use the provided thread cutting screws to fasten connector to the drive. Tightening torque: 1.3 Nm

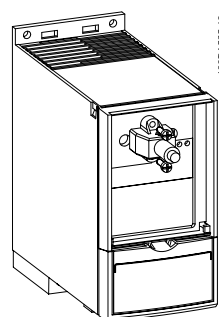

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

