 

VLT[®] HVAC Drive

Danfoss

Auto = Control from 4-20mA external reference, Setup 2

[illegible]

Erstellt von: Schulung

It is recommended to set all the motor parameters in Par. 1-20 to 1-26 and then perform Automatic Motor Adaption (AMA) in Par. 1-29.