

---

# VLT<sup>®</sup> HVAC Drive

*Danfoss*

[0] Off
[1] Freeze output
[2] Stop
[3] Jogging
[4] Max speed
[5] Stop and trip
[7] select setup 1
[8] select setup 2
[9] select setup 3
[10] select setup 4
[11] N2 overried release

[illegible]

## Erstellt von: Schulung

It is recommended to set all the motor parameters in Par. 1-20 to 1-26 and then perform Automatic Motor Adaption (AMA) in Par. 1-29.