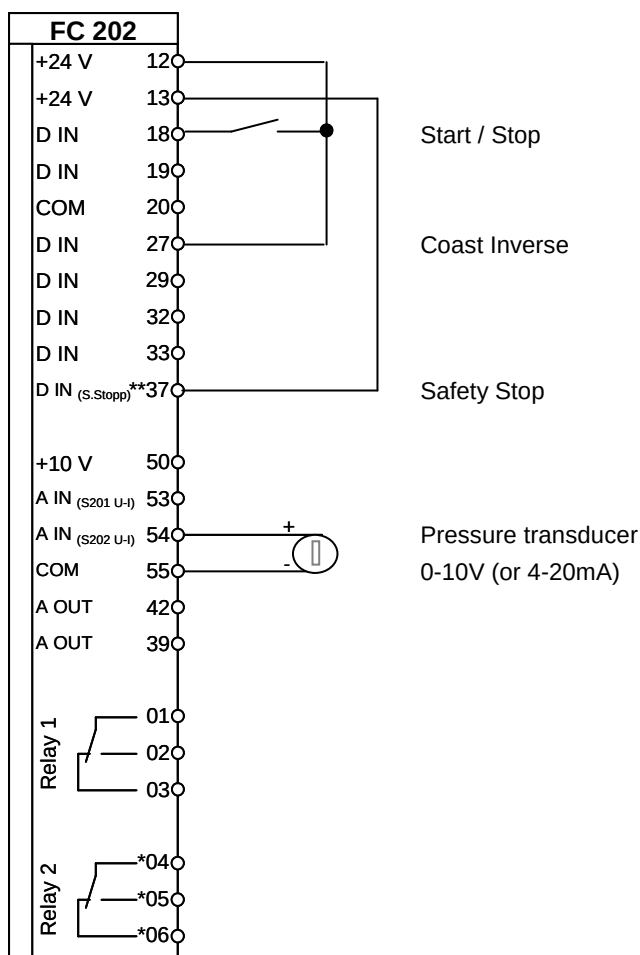

VLT® AQUA Drive

Danfoss

NOTE:

Erstellt von: Schulung

It is recommended to set all the motor parameters in Par. 1-20 to 1-26 and then perform Automatic Motor Adaption (AMA) in Par. 1-29.

[illegible]